


CUSTOMER'S COPY

SAFETY DOCUMENTS

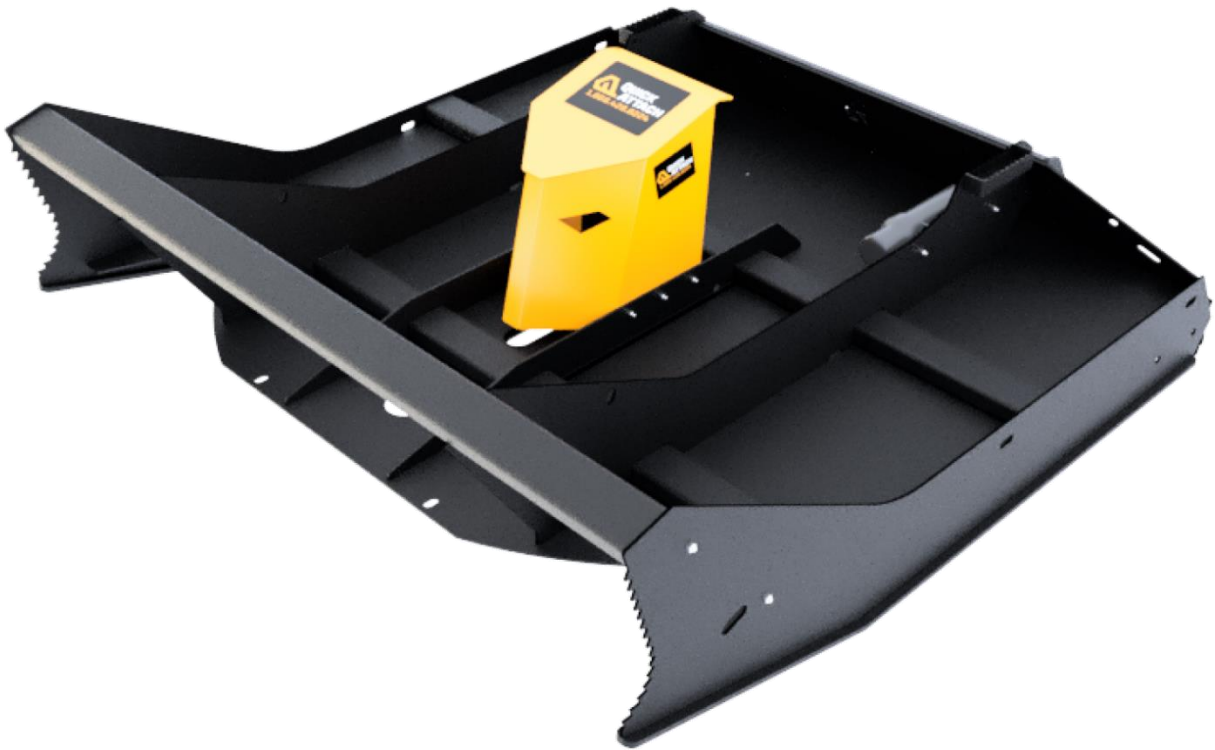

## WARNING- SAFETY

The user is responsible for inspecting the machine daily, and for having parts repaired or replaced when continued use of the machine would cause damage, excessive wear to other parts or make the machine unsafe for continued operation. If an operating procedure, tool device, maintenance or work method not specifically recommended is used; you must satisfy yourself that it is safe for you and others. You must also ensure that the attachment will not be damaged or made unsafe by the procedures you choose. Quick Attach LLC cannot anticipate every possible circumstance that might involve potential hazard. The safety messages found in this manual and on the machine are therefore not all inclusive

## Improper operation can cause serious injury or death.

### PRE-OPERATION

- This attachment is designed for mowing grass, brush, and small trees only. **NEVER** use this attachment for purposes other than intended.
- Read the operator's manual for the "Skid Steer Loader". **NEVER** allow untrained people to operate.
- Operating instructions must be given to everyone before operating this machine and at least once a year thereafter in accordance with OSHA regulations.
- **NEVER** exceed the maximum recommended input power or speed specifications for the attachment. Overpowering or over-speeding the attachment may cause personal injury and/or machine damage.
- Keep all shields, guards, and covers in place.
- Do not modify equipment or add attachments that are not approved by Quick Attach LLC.
- Use adequate safety warning lights and devices as required by local regulations. Obey all local laws and regulations regarding machine operation on public property.

### OPERATION

- To protect the operator from debris and cab intrusion, loader must have polycarbonate or similar strength door and door must be closed in order to operate the attachment.
- Hydraulic connections may be hot after use. Use gloves if connecting or disconnecting after use.
- Check and be sure all operating controls are in neutral before starting the engine.
- Keep people away from loader and attachment when in use. This attachment send objects flying and has rotating parts. **NEVER** direct discharge toward people - rocks and debris can be thrown hundreds of feet.

### OPERATION (continued)

- **NEVER** operate near embankments or terrain that is so steep that rollover could occur.
- Always stay in the operator position when using the attachment.
- Before leaving the operator position, disengage hydraulic drive, lower the attachment to rest flat on the ground, stop engine, set park brake, and wait for all motion to stop.
- **NEVER** clear debris while engine is running.

### AVOID HIGH PRESSURE FLUIDS HAZARD

- Escaping fluid under pressure can penetrate the skin causing serious injury.
- Avoid the hazard by relieving the pressure before disconnecting hydraulic lines.
- Use a piece of paper or cardboard, **NOT BODY PARTS**, to check for suspected leaks. Wear protective gloves and safety glasses or goggles when servicing or performing maintenance on hydraulic systems.
- If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.

### MAINTENANCE

- **NEVER** make adjustments, lubricate, clean, or perform any service on the machine while it is in operation.
- Make sure the attachment is serviced on a daily basis. Improper maintenance can cause serious injury or death in addition to damage to the attachment and/or your equipment.



# SAFETY DOCUMENTS BRUSH MOWER



## ABC Equipment Rental's Copy

***To be filled out by the Delivery Driver delivering the brush mower or Yard Person. Upon completion attach to the original contract. Check mark the boxes after inspections are satisfactory completed.***

DATE \_\_\_\_\_

CONTRACT# \_\_\_\_\_

### Pre-operation Inspection

- Check that operators manual is in the box.
- Check lift chain and shackle for damage or defects.
- Check blades for cracks or damage. Replace in sets of four if necessary.
- Check carbide teeth for damage. Replace as needed.
- Check blade mounting hardware for proper torque of 1000ft. lbs. (1355Nm).
- Check all hardware. Retighten if necessary.
- Check deck and shields. Repair if damaged or replace if necessary.
- Check for damaged or missing decals. Replace if missing.
- Check for damaged or leaking hydraulic hoses or fittings. Replace if necessary.
- Clean debris, leaves, grass, and flammable material from deck area and under covers.
- Check lubrication level in bearing carrier. Use EP80W-90 gear lube or equivalent.
- Oil capacity on std flow models is 10 oz. (295 mL) (16 oz. with Eskridge version)

INSPECTED BY (signature) \_\_\_\_\_ PRINT NAME: \_\_\_\_\_

### QUALIFIED OPERATOR ACKNOWLEDGMENT

COMMENTS \_\_\_\_\_

\_\_\_\_\_

OPERATORS SIGNATURE: \_\_\_\_\_ DATE: \_\_\_\_\_

PRINTED NAME: \_\_\_\_\_

HAVE PICTURES BEEN TAKEN? YES / NO

UPON COMPLETION ATTACH TO ORIGINAL SIGNED CONTRACT